

✓ Know How to Measure Your Casement Windows for Window Guards:

Window Guards are installed vertically (bars go up and down)

(Be sure children are not present when installing guards)



Measure from windowsill to inside top of window frame. (*Typically window crank fits through the bars*)



Measure the window opening from inside the jamb ~ right to left.



You can measure and install the guards on the outside of the window casing as shown above.



Photo shows a close up of the top of the window. Guard is mounted inside, close to window; blind is installed on the outside casing.

Information provided by Jan Berichon, COTA/L, Health Educator www.legacyhealth.org/safetycenter
The Safety Center at Randall Children's Hospital at Legacy Emanuel

7.13